

RS232K - Additional RS-232 Key

Connects AMR system to host computer for reading meters with the E-Mon Energy software program.

- Converts RS-485 to RS-232 for input into computer serial port.
- Three (3) RS-485 inputs (RJ-11 modular jack) from AMR system.
- 4000-foot RS-485 cable maximum at each RS-485 input.
- Supports up to 52 IDR units (416 meters) or Class 3000 units in any configuration per channel (3 channels.)
- Up to 19200 baud.
- AC adapter included.

USBK - Additional USB Key

Connects AMR system to host computer with USB port for reading meters with the E-Mon Energy software program.

- Converts RS-485 to USB for input into computer USB port.
- One (1) RS-485 input terminal block.
- Powered from USB port.
- Supports up to 32 IDR units or Class 3000 meters.

EKM-T - External Key with Modem for Telephone Access

Connects AMR system to host computer with modem for reading meters with the E-Mon Energy software program.

- Converts RS-485 to RS-232 for input into computer serial port.
- Three (3) RS-485 inputs (RJ-11 modular jack) from AMR system.
- 4000-foot RS-485 cable maximum at each RS-485 input.
- Supports up to 52 IDR units (416 meters) or Class 3000 units in any configuration per channel (3 channels.)
- Up to 19200 baud.
- Includes built-in telephone modem for easy connection to a telephone line.
- AC adapter included.

EKM-E - External Key with Modem for Ethernet Access

Connects AMR system to host computer with Ethernet card for reading meters with the E-Mon Energy software program.

- Converts RS-485 (meter) to 10Mbps Ethernet for connection to an Ethernet network.
- AC adapter included.